

## Start/stop magnet

code: LP004



Magnet for record start/stop of Sxxxx, Rxxxx data loggers.

## Technical data