

SP041 – QUICK START MANUAL

optional accessories for Wx9xx series transmitters

DESCRIPTION AND USE

The gateway serves as an access point for the local LoRaWAN® network and is designed to connect COMET Wx9xx series transmitters to the COMET Cloud via the LoRaWAN® network.

The gateway is a third-party product, supplied with complete original accessories for its power supply and installation. However, it is preset so that after installation it immediately starts receiving data messages from the LoRaWAN® network with its builtin antenna, supplements them with the correct time of message receipt and sends the complete data to the target server used by the COMET Cloud. The condition is a connection to a network with available Internet, without restrictions on the outgoing direction from the gateway, e.g. by a firewall. A DHCP server must also be available in this network.

Differences in the gateway configuration compared to the factory settings from the manufacturer:

- the radio part of the gateway is internally connected to the built-in antenna for the LoRaWAN® network
- the primary and secondary SNTP servers are set for real-time maintenance
- the target server for sending data is set
- for at least minimal security, a password for the gateway's WiFi network is set (password: LoRa111*)

The gateway is configured via WiFi, see the original device manual. We recommend setting your own, strong password to restrict access to your own network via the gateway with a WiFi connection. Alternatively, set another password in the gateway router.

Warning: if you reset the gateway to factory settings, all presets will be lost!

Registering a gateway to the COMET Cloud is done in the Administration / LoRa Gateways menu. Add your gateway to the list by entering its Gateway EUI identifier. You can also give it a suitable name and enter its location on the map. Within a few minutes of connecting the gateway, its status in the list must change to ONLINE.

RECOMMENDED GATEWAY CONNECTION

